

# Lab1: getting started with LoPy

Marco Zennaro, PhD  
ICTP



# Labs

- 1/3 Ready to use, tested examples
- 1/3 Exercise based on the examples
- 1/3 Your imagination → create new applications

# Lab alert

The number of variables in the lab settings is huge  
(computer operating system, firewall, device  
firmware version, code version, network, etc)

Things will go wrong :-)

Be patient, we will solve all issues!

Found a bug? Let me know! Feedback is welcome.

# Our Lab equipment

Pycom LoPy 4

PySense

microUSB Cable



LoPy

PySense


# Workflow: Atom



Please install from [www.atom.io](http://www.atom.io) or download the installer from our local server.

If you have it already, upgrade to the latest version!

# Workflow: install the **pymakr** package

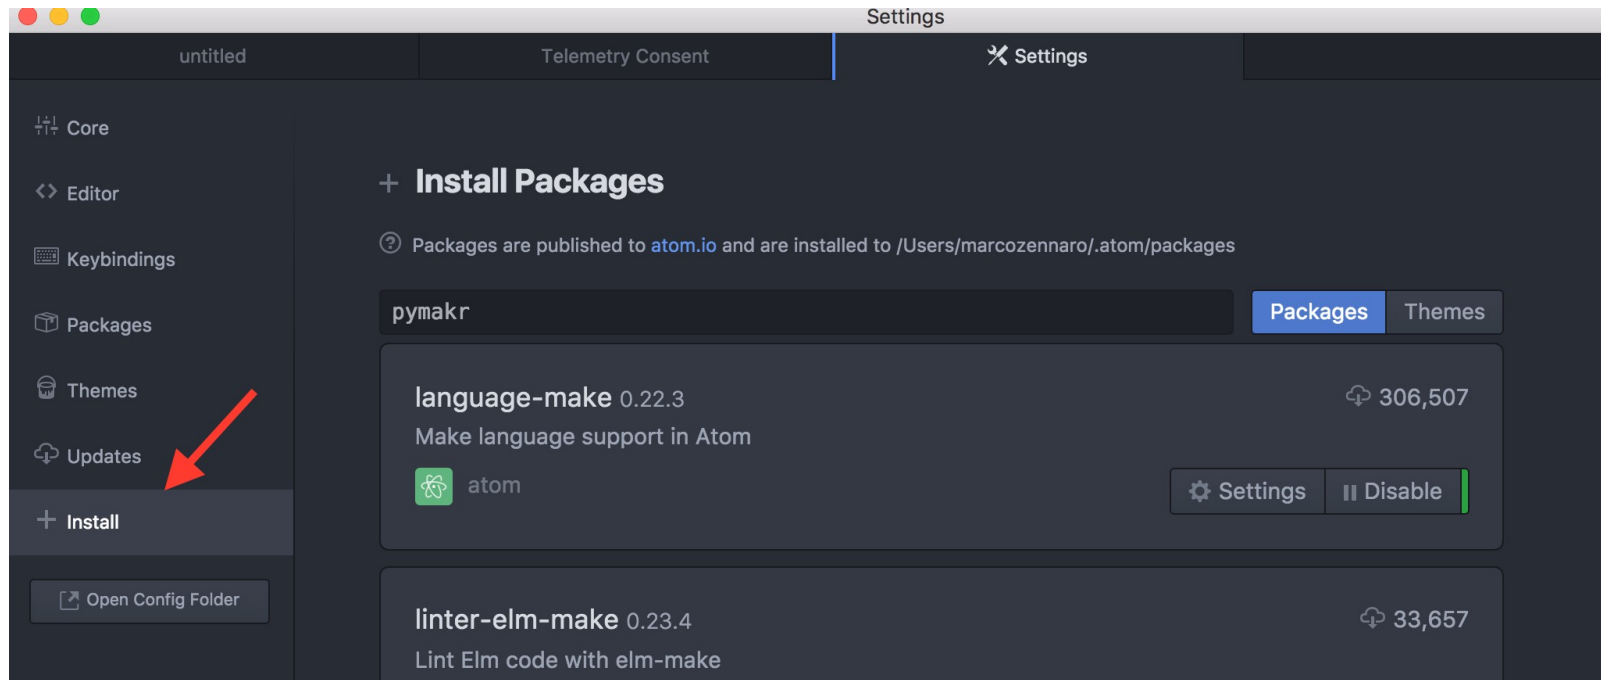


Atom > Preferences > Install

Different on Windows, Mac, Linux




# Workflow: connect board via USB

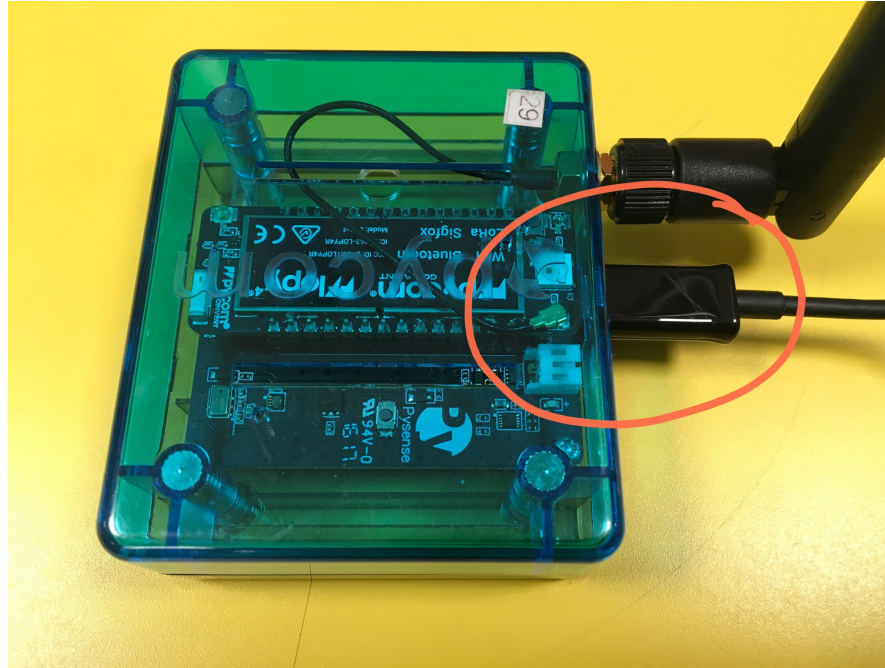

Make sure the LED and the microUSB are on the same side!

# Workflow: connect!

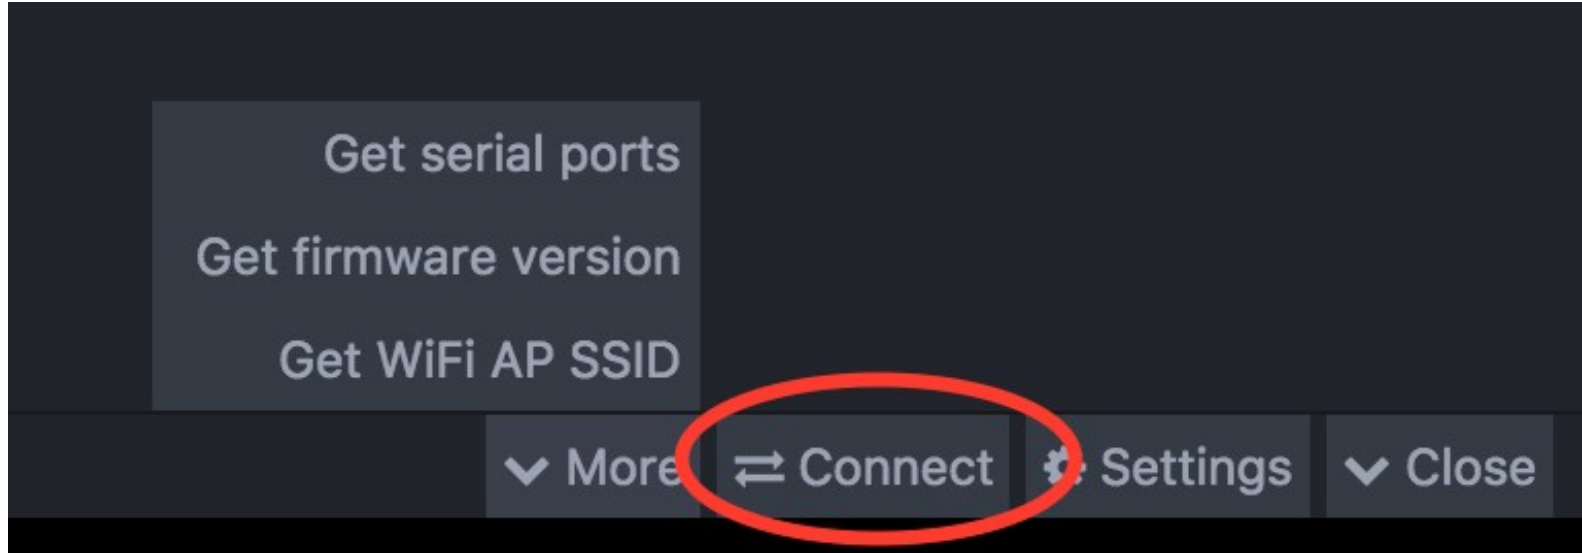

Click on Connect



# Workflow: REPL

```
Connected ✓  
Found 3 serialports  
/dev/cu.usbserial-DQ008N17 (copied to clipboard)  
/dev/cu.MarcosiPad-WirelessiAP  
/dev/cu.Bluetooth-Incoming-Port  
Connecting on /dev/cu.usbserial-DQ008N17...  
  
>>>  
>>>  
>>>  
>>>  
>>>
```

# Pycom driver

If you are running Windows 10, Mac or Linux, your LoPy should be recognized by the OS without any problem.

If your LoPy does not show up in the console, don't panic!

# Connecting via WiFi

On the bottom of the LoPy you will find a sticker with a name:




# Connecting via WiFi

Connect your computer to the Access Point that has that name.

The password is “[www.pycom.io](http://www.pycom.io)”.

# Connect to a LoPy via WiFi

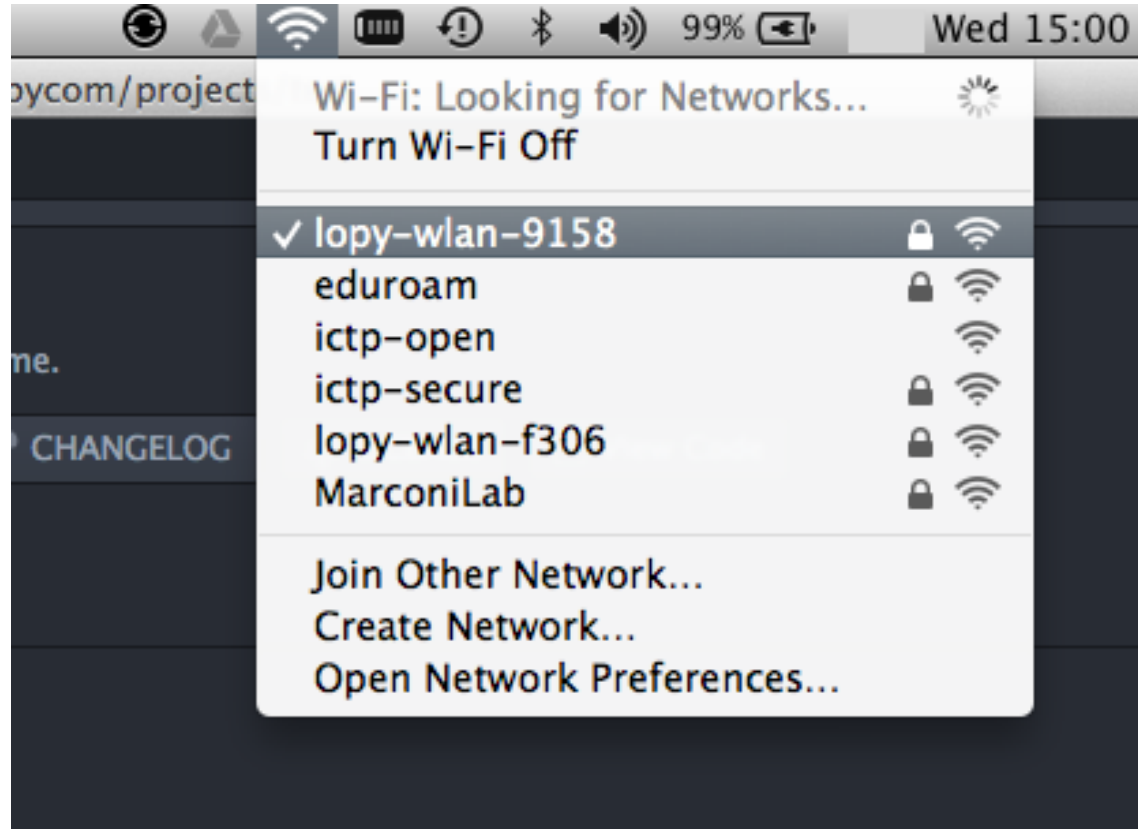

# Connecting via WiFi


Once connected, in Atom navigate to Settings > Global Settings

In Device Address enter 192.168.4.1


The default username and password are “micro” and “python”, respectively.

Click Connect in the Pymakr pane, Pymakr will now connect via WiFi in the console.

# Connecting via USB

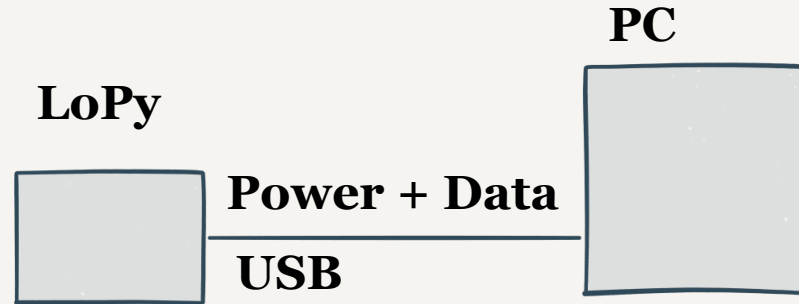

# Connecting via WiFi

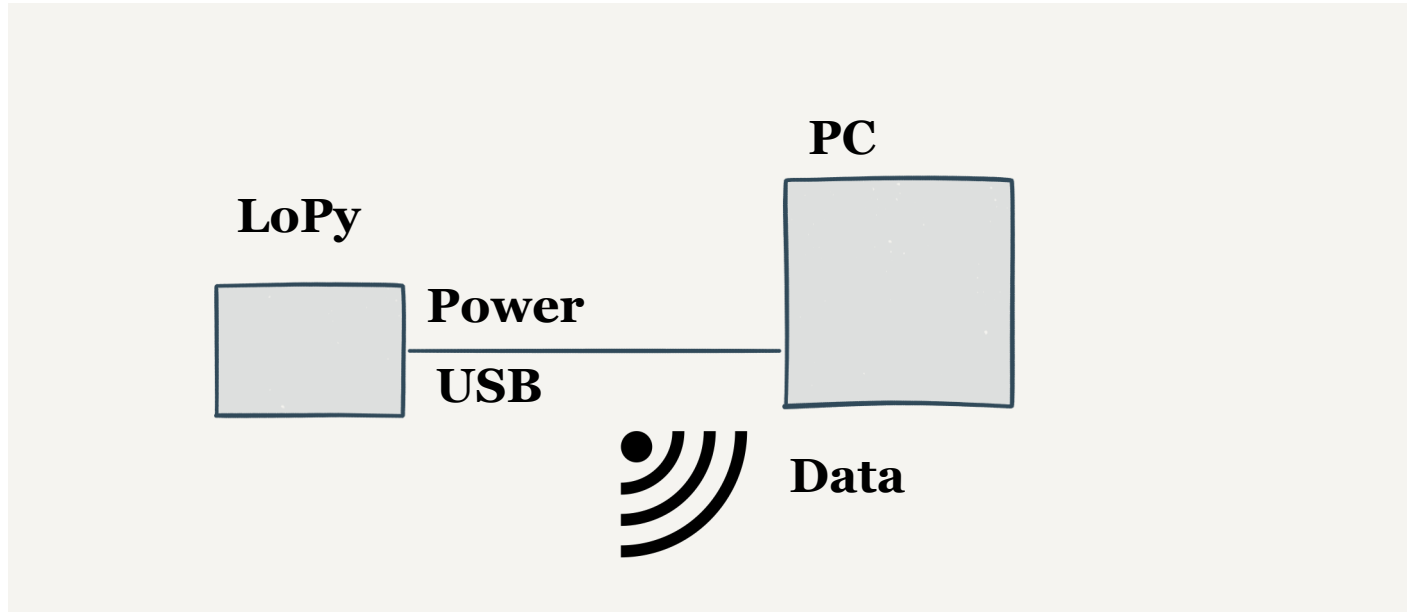



# REPL console

**REPL** stands for Read Print Eval Loop. Simply put, it takes user inputs, evaluates them and returns the result to the user.

You have a complete python console! Try to enter  
`>>> 2+2` and press Enter.

Now enter: `>>> print("Hi! I am a python shell!")`

# Executing code



There are three ways to execute code on a Pycom device:

- 1) Via the **REPL** shell. Useful for single commands and for testing.

# REPL example

The `os` module can be used for further control over the filesystem. First import the module:

```
>>> import os
```

Then try listing the contents of the filesystem:

```
>>> os.listdir()
```

# REPL example

You can make directories:

```
>>> os.mkdir('dir_iotlab')
```

And remove entries:

```
>>> os.remove('data.txt')
```

# REPL example

If a device's filesystem gets corrupted, you can format it by running:

```
>>> import os
```

```
>>> os.mkfs('/flash')
```


# Executing code

2) Using the **Run** button. Code that is open on the Atom editor will be executed, but will **not be stored in the device**.



If you reboot, the code will not be executed again.

# Executing code

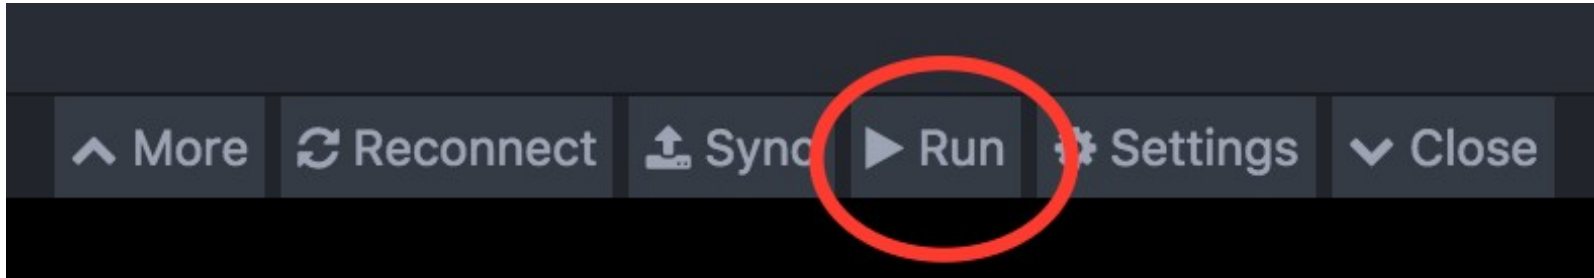


# Executing code


3) **Synching** the device with the **Project folder** in Atom. In this way, the code is stored in the Pycom device and will be executed again if you reboot the device.



# Workflow: project folder

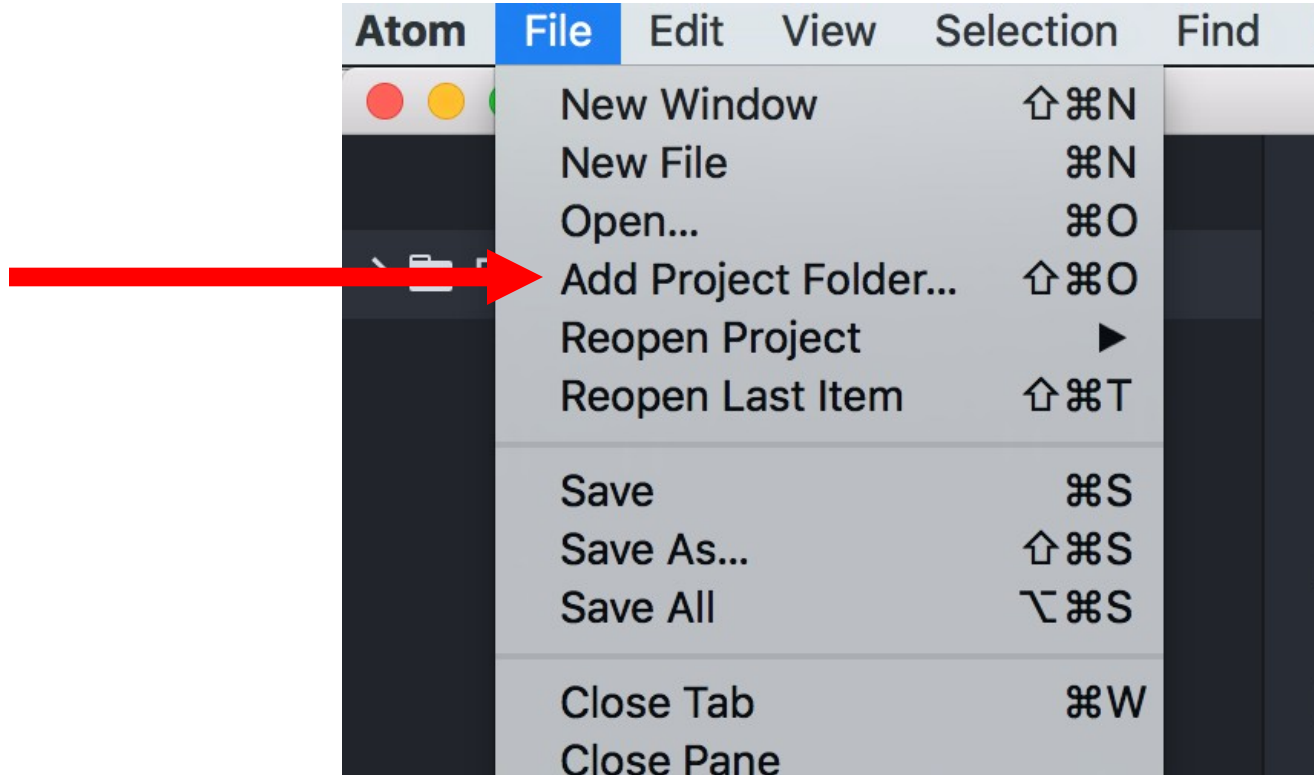

# Workflow: ONE project folder

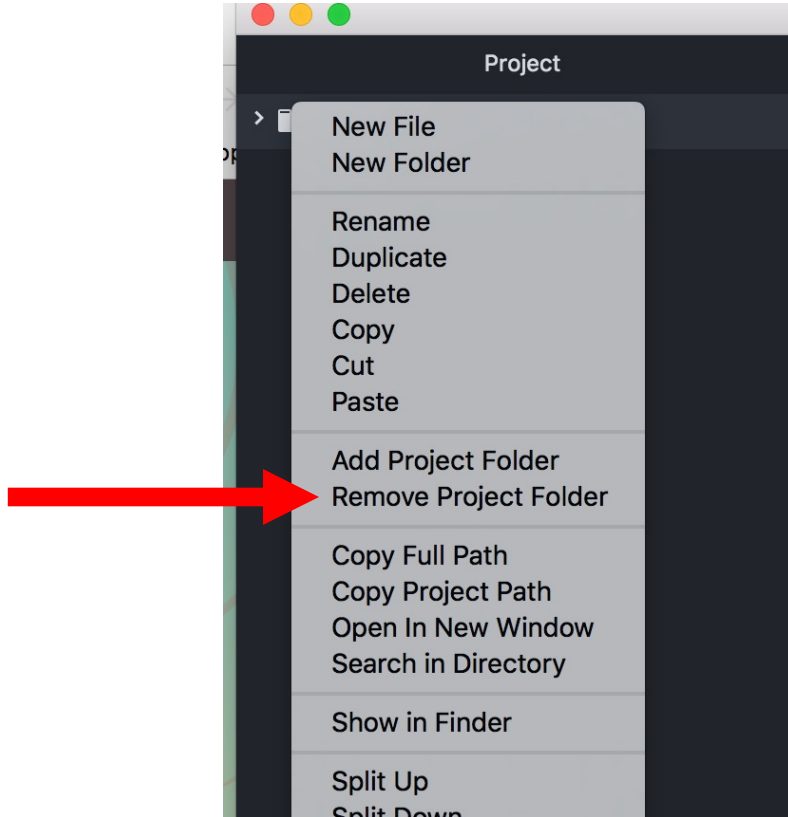

It is easier if you only have one Project folder. Make sure you Remove any other Project folders and **keep only the one you want to use.**


# Workflow: project folder

The Project folder should contain all the files to be synched with the device.


You should always have two files: **boot.py** (executed at boot time) and **main.py** (containing the main code).

The folder can also include libraries and other python files.

# Workflow: example of project folder

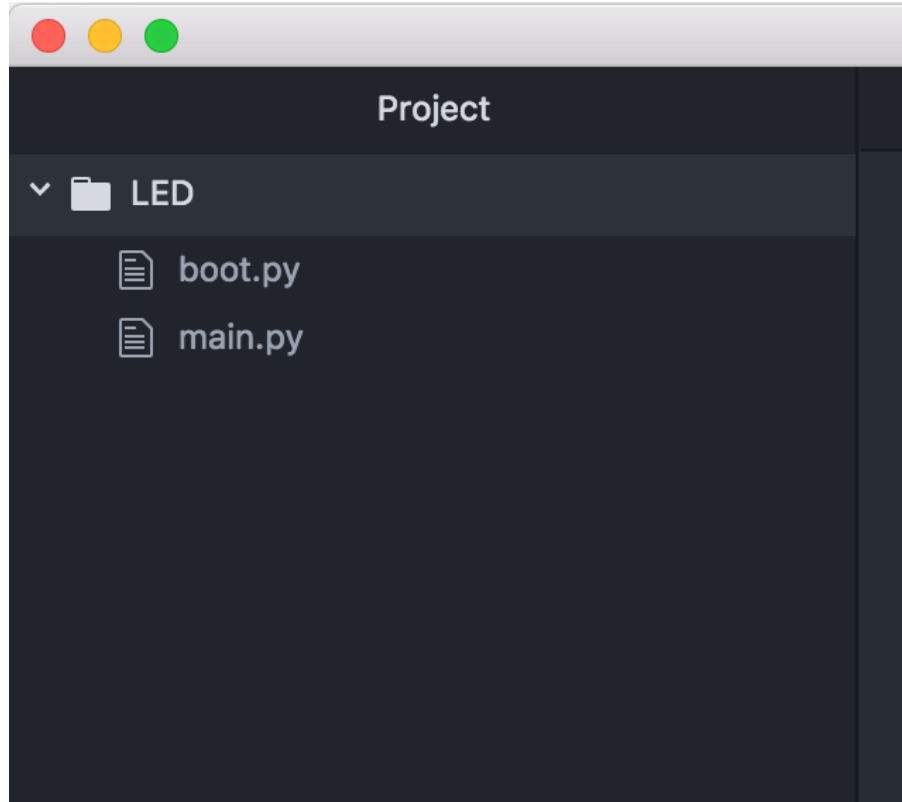

# Workflow: upload project folder

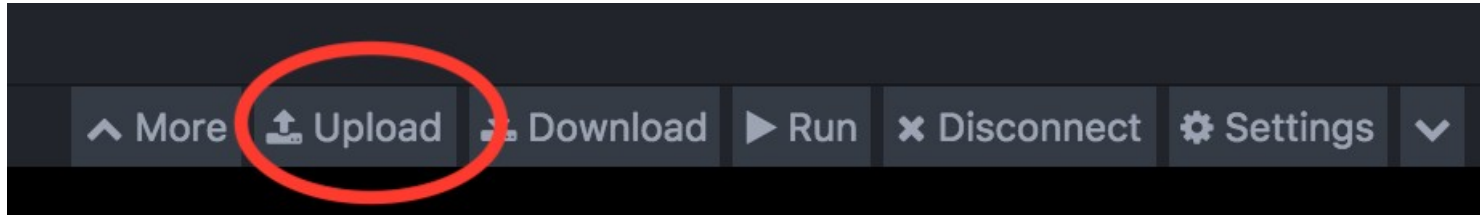

# Workflow: useful Atom settings

Settings → Global Settings



Autoconnect on USB

Ignores any 'device address' setting and automatically connects to the top item in the serialport list

Only if you are connecting via USB!



Upload all file types

If enabled, all files will be uploaded no matter the file type. The list of file types below will be ignored

# Workflow: useful Atom settings



## Open on start

Automatically open the pymakr console and connect to the board after starting Atom



## Safe-boot before upload

[Only works with firmware v1.16.0.b1 and up.] Safe boots the board before uploading to prevent running out of memory while uploading. Especially useful on older boards with less memory, but adds about 2 seconds to the upload procedure



## Reboot after upload

Reboots your pycom board after any upload or download action

# Workflow: boot.py

The boot.py file should always start with following code, so we can run our Python scripts over a serial connection (USB).

```
from machine import UART
import os
uart = UART(0, 115200)
os.dupterm (uart )
```



# Alternative to Atom: mpy-repl-tool

**mpy-repl-tool** is a software tool that you can use to connect and control a LoPy via the command line

<http://mpy-repl-tool.readthedocs.io/en/latest/index.html>

To install it you have to execute:

```
$ python3 -m pip install mpy-repl-tool
```

# Alternative to Atom: mpy-repl-tool

This command will list the serial ports and “hopefully” will automatically find your LoPy board.

```
$ python3 -m there detect
```

To get a list of the files on the LoPy run:

```
$ python3 -m there ls -l /flash/*
```

# Alternative to Atom: mpy-repl-tool

To upload the code files from your computer to the LoPy:

```
$ python3 -m there push *.py /flash$ python3 -m
```

To start a serial terminal and get access to the REPL:

```
$ python3 -m there -i
```

# Resetting

They are different ways to reset your device. Pycom devices support both **soft and hard resets**.

A soft reset clears the state of the MicroPython virtual machine but leaves hardware peripherals unaffected. To do a **soft reset**:

press Ctrl+D on the REPL

# Resetting

A **hard reset** is the same as performing a power cycle to the device. In order to hard reset the device, press the reset switch or run:

```
>>> import machine
```

```
>>> machine.reset()
```

LED


# LED

In this example, we will create and deploy the proverbial 1st app, “Hello, world!” to a Pycom device.

LoPys don’t have screens!

The LoPy module has one LED (big, white LED on the same side as the microUSB).


# LED

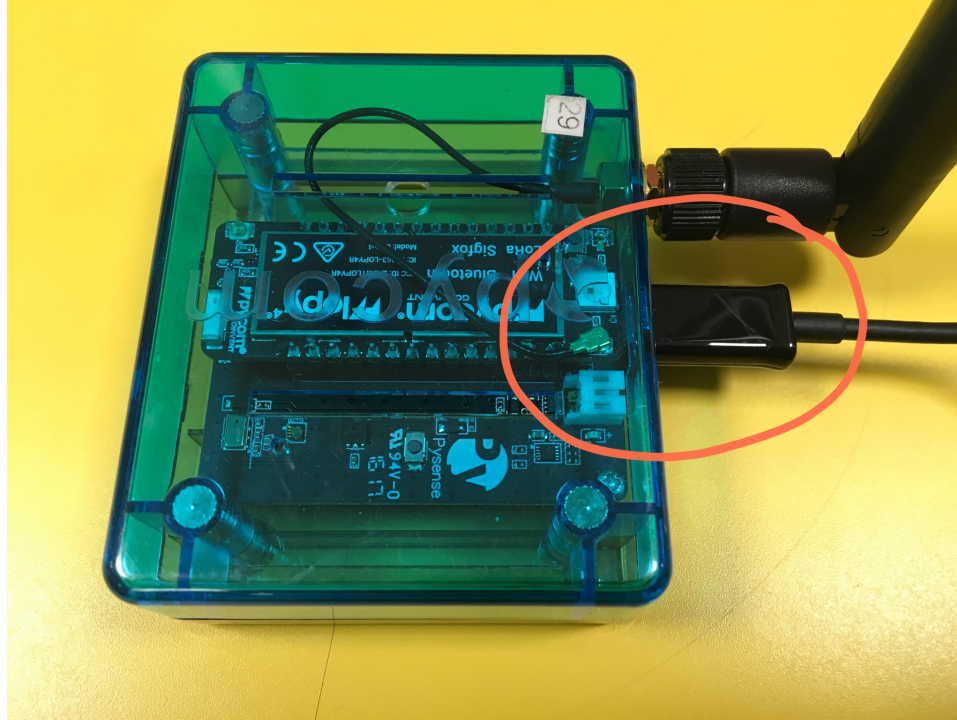



# LED

Check the **LED folder** and sync the two files to your active project folder.

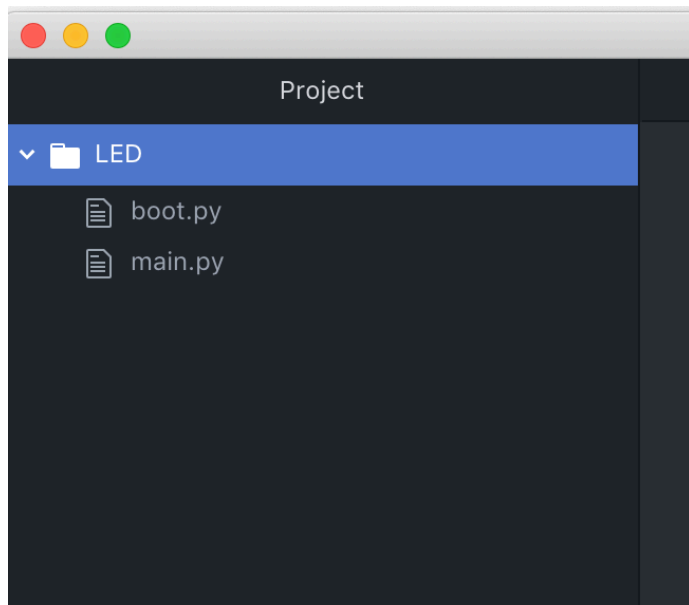

# LED example, part 1

```
import pycom
```

Import the python libraries needed

```
import time
```

```
pycom.heartbeat(False)
```

Set OFF the heartbeat (the LED turns blue to show that the device is alive) as we will change the color of the LED

# LED example, part 1

for cycles in range(10):

Execute 10 times

pycom.rgbled(0x007f00) # green

Change LED color to green, yellow and red

time.sleep(5)

Sleep for 5 seconds each time

pycom.rgbled(0x7f7f00) # yellow

time.sleep(5)

pycom.rgbled(0x7f0000) # red

time.sleep(5)

# LED: Exercises

- 1) Use the LED to simulate a traffic light (red, yellow and green lights)
- 2) How fast can the light blink? (modify the sleep time)
- 3) Try to change the color of the LED gradually (from yellow to red, for example)

PySense

# PySense: high-level modules

In this lab, we will provide a series of examples to use the sensors in the PySense module.

Pycom provides a library abstracting the implementation details of sensor chips. This library is already included in labs code under the “lib” folder of each example.

# PySense: high-level modules

accelerometer in `Code/pysense/acceloremeter`

**ambient light in `Code/pysense/ambient-light`**

temperature and atmospheric pressure in  
`Code/pysense/temp-bar`

temperature and humidity in `Code/pysense/temp-hum`

# PySense: Exercises

- 1) Change the color of the LED based on light measurements (no light → red, strong light → green)
- 2) Change the color of the LED based on the accelerometer measurement (slow acc → slow blink, fast acc → fast blink)



# PySense: Exercises

- 3) Change the color of the LED based on the temperature measurement (cooler → green, warmer → red)
- 4) Come up with a cool and useful application!

# Summary

We introduced the Pycom workflow.

We learned how to change the color of the LED and read values from the PySense.

# Feedback?

Email [mzennaro@ictp.it](mailto:mzennaro@ictp.it)